

尺寸: 75*75mm



EP- 6TA6
USER MANUAL
True Wireless Stereo

Package Contents



Charging Case × 1PC



Earbuds × 1 Pair

 


Type- C Charging Cable × 1PC



User Manual × 1 PC


Product Overview

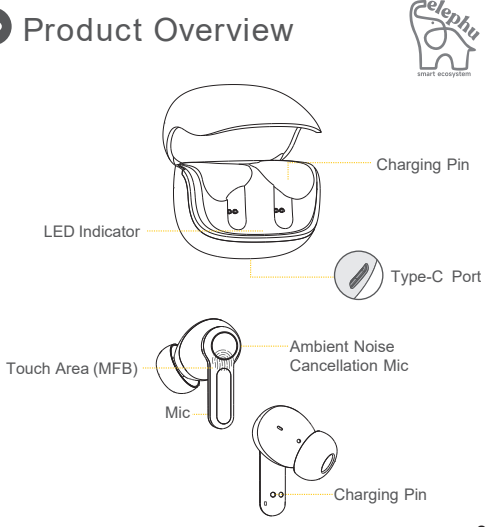

LED Indicator, Charging Pin, Type-C Port, Touch Area (MFB), Ambient Noise Cancellation Mic, Mic, Charging Pin

Touch Control Diagram

 
The touch area (MFB Touch Panel) is located in the upper part of earbuds handle.

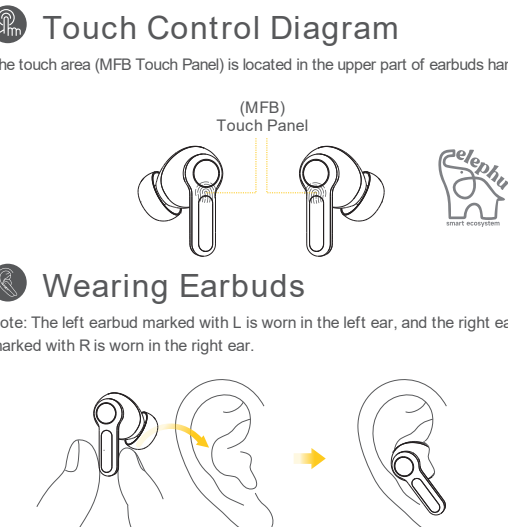

(MFB) Touch Panel


Wearing Earbuds

 Note: The left earbud marked with L is worn in the left ear, and the right earbud marked with R is worn in the right ear.

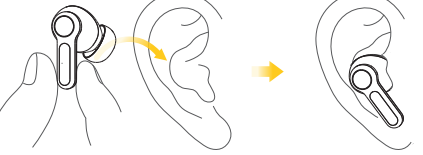


Power ON/ OFF

 Power on
Auto: Open the charging case to power on
Manually: Press and hold the MFB for 3s.

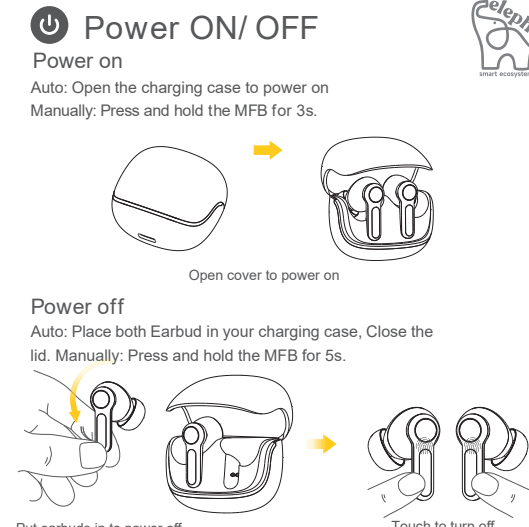

Open cover to power on

 
Power off
Auto: Place both Earbud in your charging case, Close the lid. Manually: Press and hold the MFB for 5s.

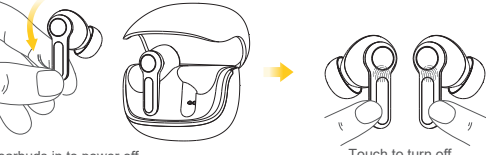

Put earbuds in to power off, Touch to turn off

Pairing

 
1. Open the charging case, and take out the earbuds, earbud will pair automatically, One of the earbuds flashes blue and red, the another earbud light goes out.
2. Activate Bluetooth on the device, turn on Bluetooth, search for pairing name "EP- 6TA6 " and click on it.

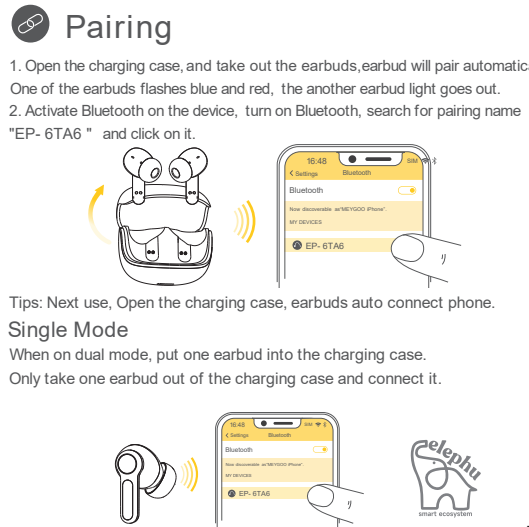


Tips: Next use, Open the charging case, earbuds auto connect phone.
Single Mode
When on dual mode, put one earbud into the charging case. Only take one earbud out of the charging case and connect it.

Bluetooth Lost

 1. Turn off mobile phone's Bluetooth, earbuds will enter the pairing mode and can pair with other devices.
2. If the connection range is exceeded, the earbuds will enter the back connection mode. No connection within 5 minutes, the earbuds will turn off

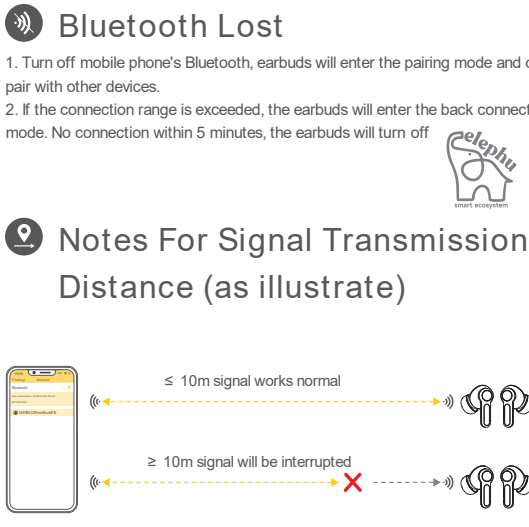

 Notes For Signal Transmission Distance (as illustrate)

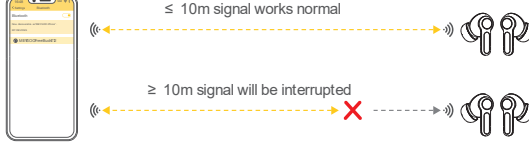


≤ 10m signal works normal
≥ 10m signal will be interrupted

Reset

If your earbuds accidentally only get one earbud to work, or fail to pair, please reset the earphone.

 
1. Delete all "EP- 6TA6" Bluetooth records on the phone, and turn off Bluetooth
2. Put earbuds into charging case, and then take out to pairing modes, tap L & R MFB 5 times simultaneously, hear "DU" prompt voice to clear all pairing.
3. Put earbuds into charging case.

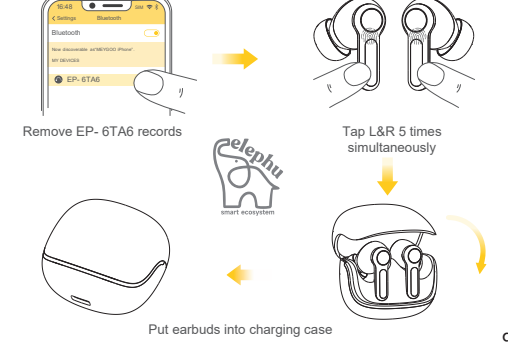

Remove EP- 6TA6 records, Tap L&R 5 times simultaneously, Put earbuds into charging case


Touch Operation

 Left Earbud

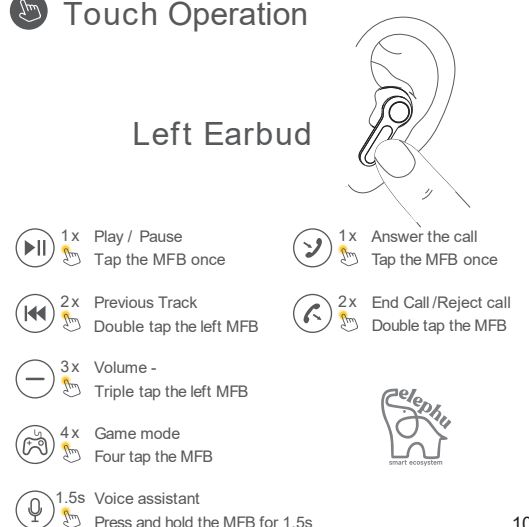

1x Play / Pause Tap the MFB once
2x Previous Track Double tap the left MFB
3x Volume - Triple tap the left MFB
4x Game mode Four tap the MFB
1.5s Voice assistant Press and hold the MFB for 1.5s

 
Right Earbud

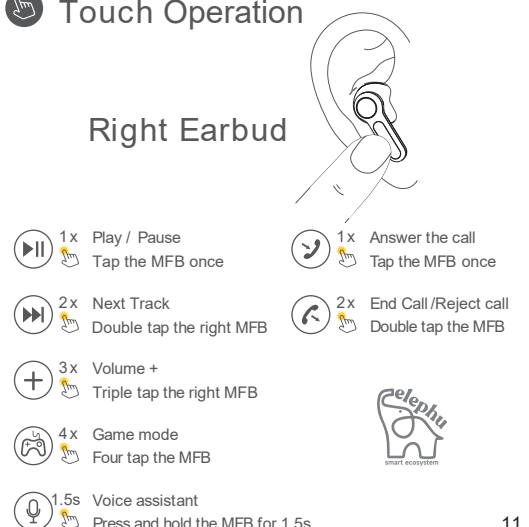

1x Answer the call Tap the MFB once
2x End Call /Reject call Double tap the MFB
2x Next Track Double tap the right MFB
3x Volume + Triple tap the right MFB
4x Game mode Four tap the MFB
1.5s Voice assistant Press and hold the MFB for 1.5s


Earbuds low battery alarm

 When the battery power is low, every 1 minute voice reminder "Lower battery" and Red light double flashing, until the battery power is run out and turn off.

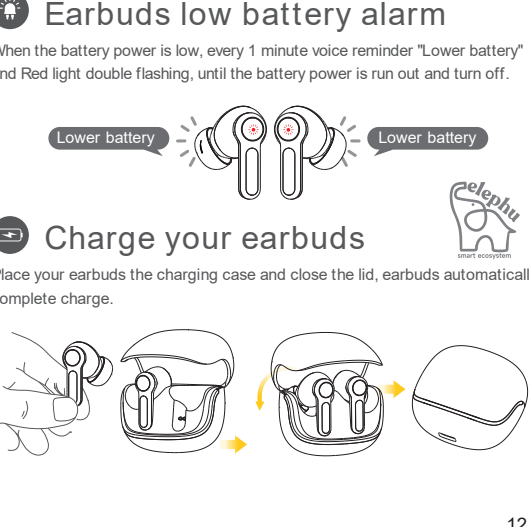

Charge your earbuds

 Place your earbuds the charging case and close the lid, earbuds automatically complete charge.

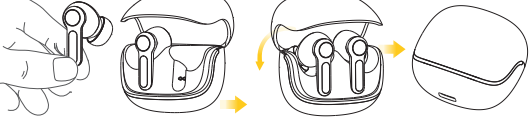

Product Parameter

Model Name:	EP- 6TA6
Bluetooth Version:	V5.4
Speaker:	Φ13mm
Bluetooth Range:	10m/ 33ft(with out obstacles)
Technology:	HSP/ HFP/ A2DP/ AVRCP
Frequency Range:	20Hz~20KHz
Weight:	4g
Size:	32.5*25*26mm
Charging Time:	0.5H
Battery Capacity:	40mAh
Play Music Time:	6H
Input:	DC 5V == 0.08A

Charging Case

Weight:	37g
Size:	50*54*33mm
Charging Time:	2H
Battery Capacity:	500mAh
Input:	DC 5V == 0.1A

Earbuds Warning

1. Please do not place the product in an environment where the temperature is too low(above 45°C or below 0°C).
2. Do not dismantle or repair the earbuds under any circumstances, if necessary, please send the product to the seller for repair.
3. Do not throw and drop the earbuds to avoid damage.
4. The earbuds and the BT devices will be disconnected if the distance between them is more than 10 meters.
5. Keep the device and accessories away from children and pets.
6. Do not put the earbuds into the washing machine.

Battery Warning

1. The battery in the product may cause fire disaster or risk of chemical burning if mishandled.
2. Please charge with a rated voltage charger.
3. The discard of battery should obey local law, if possible please recycle it. Do not dispose it as household garbage, because it may cause a explosion.
4. Users are not allowed to take out or replace battery in the product unless there is a stipulation on user manual. It is very hazardous to do this, may cause a damage to prodct.



RoHS